

**Adjusting oil spray**

Use screw driver to adjust oil spray.  
Turn oil adjusting screw clockwise to decrease oil spray.  
Turn oil adjusting screw counter-clockwise to increase oil spray.



**The way to fill oil**

Open oil plug, fill oil directly without cut off air supply.  
ISO VG32 lubricator oil is highly recommended.  
\*For (UL02~08)



**How to use sleeve valve**

Pull backward to stop air and release residual air pressure.  
Push forward to open air line.




**Pressure regulating**

Pull up regulator knob and turn it clockwise to increase pressure.  
Pull up regulator knob and turn it counter-clockwise to decrease pressure.



**Semi-auto drain**

The water drain automatically when air pressure in filter bowl is below 0.5kgf/cm<sup>2</sup>.  
You can also turn down the stopcock to stop drain.

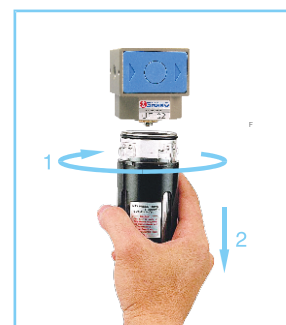

**Bowl & Bowl guard**

Turn counter-clockwise to take off bowl and bowl guard.  
High quality material provides product long-life and easy maintenance.

